


How to Measure for Replacement Vertical Blind Slats

Measuring for replacement slats is super simple as we only require one measurement: your slat size. Simply measure the length of your slat as detailed below and enter how many replacement slats you would like on your chosen product.

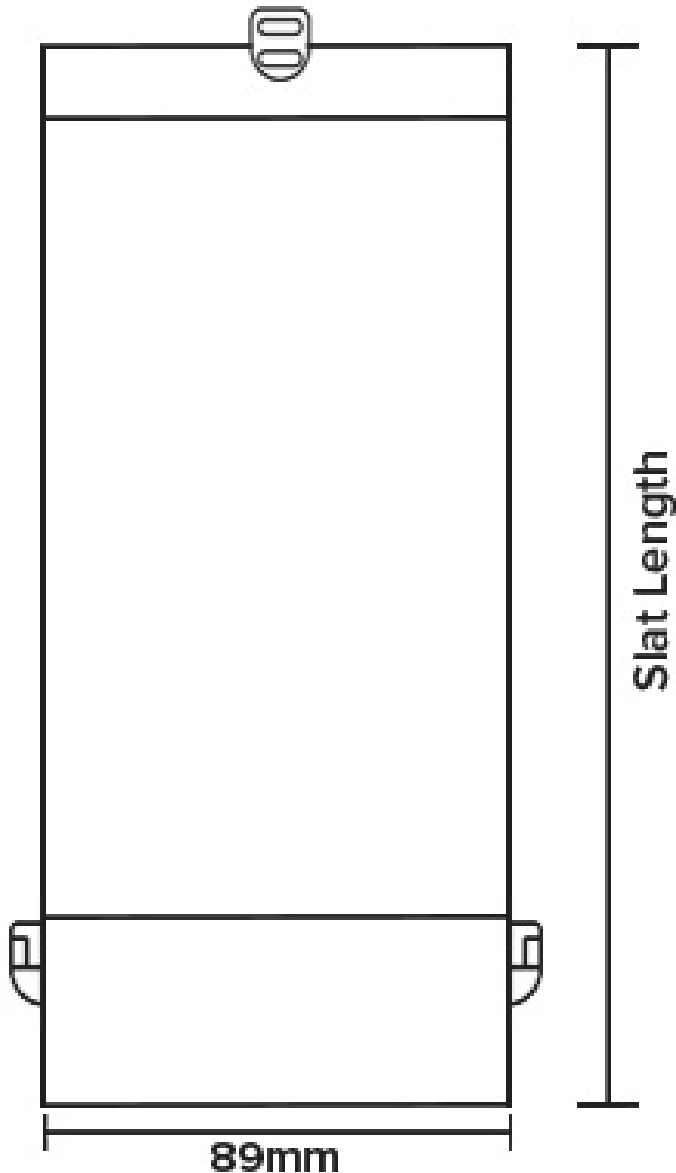

Measuring Slat Size

Using a measuring tape, you should measure the length of one of your existing slats. To do this, simply measure from the top of the fabric vane to the bottom. Please do not include any hangers or existing headrail in your measurements. Enter this as your 'drop' on the product page.

Number of Slats

Next you'll simply need to count the number of existing slats that you'd like to replace.

Please Note: All of our vertical blinds and vertical blind replacement slats are manufactured with standard 89mm width vanes. Please ensure your existing blind is suitable for 89mm width vanes before placing your order.