
PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT


WAND OPERATION-DRAW

Use the wand to draw the slats to either end of the blind.

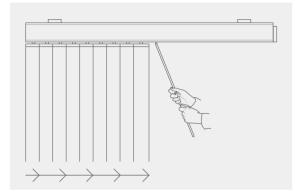

Twist the wand to tilt the slats in either direction to the open/closed position.

WAND OPERATION-TILT

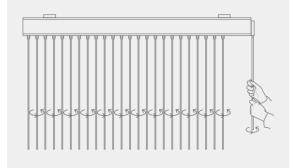

If any of the slats are out of alignment, twist the wand control until the slats are in the closed position, then continue to twist the wand until all the slats are fully aligned. You may feel some resistance and hear a clicking noise whilst doing so.

MAINTENANCE

The product is low maintenance, however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk.

To ensure the slats slide smoothly across the headrail apply some silicone base lubricant spray to inside of the headrail.

If any maintenance is required we recommend that the work is carried out immediately by a reputable blind company.

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.







Vertical Blinds Fitting Instructions

FITTING INSTRUCTIONS: VERTICAL BLINDS




VERTICAL ITEM LIST

Brackets



Safety device



Wood screws for brackets (1 per top fix bracket) (2 per shallow frame bracket)



Safety device screws x 2




TOOLS REQUIRED

Screw driver



Drill

Pencil




OUTSIDE RECESS

STEP 1

If the blind is to be fitted outside the window ensure that measurement C is the same. Follow instructions for FACE FIXING. To calculate C=(A-B)/2.

INSIDE RECESS

TOP FIX to the lintel or FACE FIX brackets to the window frame.

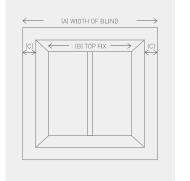

Children can strangle

if a safety device is

to keep cords or

of children

chains out of reach


not installed. Always use a safety device

TOP FIXING

STEP 2

Measue and mark the distance (D), allowing for obstructions like handles that protrude into the recess area. Position brackets approx 5cm from the ends of where the headrail is to be positioned. If more than 2 brackets are supplied, fit the additional brackets at equal spacing across the length of the blind. Please ensure fixings are suitable for the wall/surface to which you are

mounting the brackets.

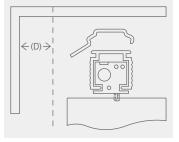

FACE FIXING


Position brackets approx 5cm from the ends of where the headrail is to be positioned. If more than 2 brackets are supplied, fit the additional brackets at equal spacing across the length of the blind. Please ensure fixings are suitable for the wall/surface to which you are mounting the brackets.



STEP 3


TOP FIXING

Tilt and hook headrail into bracket at point (E). Rotate the headrail into position until it clicks. To release the headrail push the bracket at point (F).



FACE FIXING

Hook the back of the headrail into the bracket and rotate the headrail into position. Secure headrail by tightening the short screw in the front of the bracket.




STEP 6

ATTACHING VERTICAL VANE

With the headrail fitted, hook each fabric/PVC slat into the headrail travellers ensuring the traveller pegs are in the open position.



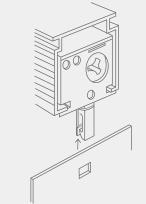

STEP 4

SAFETY DEVICE

The safety device must be installed at the maximum distance possible from the control mechanism to prevent looped chain becoming slack.

Place the safety device on the walland mark the positioning of the 2 screw holes.

Drill holes using a suitable drill bit.

Place device into position ensuring the chain is fully taut.

0
MAX DISTANCE POSSIE
(ensuring chain is fully








RETAINING DEVICE

Screw the retaining device using suitable fixings ensuring the device is fully closed.

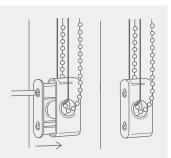

AI TERNATE DEVICE - Tie Down Clin

